

ProPrompter HD-i Pro Camera Mounting Guidelines

Maximum distance = 10" (25.4 cm)

Camera Bar Mount configuration guidelines

Distance between 1/4-20 mounting hole on bottom of camera and end of the camera lens is 10" (25.4 cm) or less.

Note: Sony EX3, Panasonic AG-HVX200A, and Canon XF305 cameras or smaller can use the camera bar mount configuration.

Optional Rail Mount configuration guidelines

Distance between 1/4-20 mounting hole on bottom of camera and end of the camera lens is greater than 10" (25.4 cm).

Note: All cameras can use the optional rail mount configuration. However, shoulder mount cameras such as the Sony XDCAM PWM500, Panasonic AG-HPX370, and JVC GY-HD250U will require the rail mount configuration.

Optional rail systems include Zacuto, Redrock Micro, Chrosziel, and more. Check with your local camera dealer or direct with a rail manufacturer for the exact rail system required for your camera. HD-i Pro accepts standard 15mm rails spaced 60mm on center.