

# SMALL HD

- 1x Offset Bracket
- 1x 1/4-20x3/8" Socket Button Screw
- 2x 1/4-20x1/2" Socket Button Screws


1. Attach Offset Bracket beneath lower, main bracket using (2) 1/4-20x1/2" Socket Button Screws, leaving clearance for C-stand hole.
2. Attach SmallHD display to middle channel of Offset Bracket using (1) 1/4-20x3/8" Socket Button Screw.
3. Adjust upper, main bracket to be flush with top of display by loosening M4 screw.



# ODYSSEY 7Q

- 2x M3x20mm Socket Cap Screws

1. Locate M3 screw holes and attach Odyssey to lower bracket using (2) M3x20mm socket caps screws.
2. Adjust upper, main bracket to be flush with top of display by loosening M4 screw.

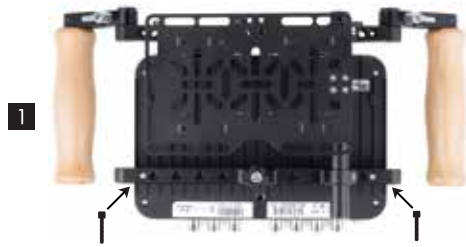

# ATOMOS

- 2x Offset Brackets
- 2x 1/4-20x3/8" Socket Button Screws
- 4x 1/4-20x1/2" Socket Button Screws

1. Attach Offset Bracket above lower, main bracket using (2) 1/4-20x1/2" Socket Button Screws, leaving clearance for C-stand hole.
2. Attach Atomos display to middle channel of Offset Bracket using (1) 1/4-20x3/8" Socket Button Screw.
3. Adjust upper, main bracket to be flush with top of display by loosening M4 screw. Attach Offset Bracket above upper, main bracket using (2) 1/4-20x1/2" Socket Button Screws.



4. Attach Atomos display to middle channel of offset bracket using (1) 1/4-20x3/8" Socket Button Screw.



**WOODEN CAMERA®**  
**DIRECTOR'S MONITOR CAGE v2**

**MONITOR INSTALLATION GUIDE**